


HAIRSONIC®

REVITALIZE
FOR FULLER HAIR

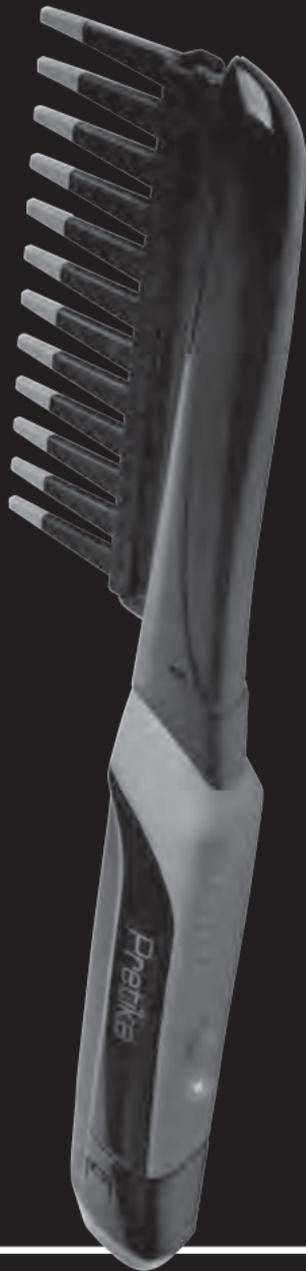

Model
HS266

Instructions for Use
& Warranty Information

Pretika®

Merging Science
with Hair Care®

Congratulations and thank you for being a customer of Pretika! Before you start, please take a moment to get to know your HairSonic and how it works.

For important information about safety and how to use the device, read the full Instructions for Use booklet. Contact the experts at Pretika for any assistance in helping you get started.

Customer Service Contact:

1-949-481-8818

Email: customerservice@pretika.com

Or visit our website at www.pretika.com

Hours of Operation:

Monday - Friday, 8:00 AM to 4:00 PM

Pacific Standard Time

CHARGING

Make sure the power is in the “OFF” mode before charging. A full charge provides up to 5 hours of use. It’s time to recharge HairSonic when the power output is reduced - a full recharge requires between 6 to 8 hours.

1. Remove Charging Cover by pressing the Release Button located on each side at the same time.
2. Lift tab on silicone cover.
3. Insert the charger cord into the HairSonic.
4. Insert the charger cord into the wall outlet.
5. The charge indicator lights up. (See diagram on page 3)
6. After the full charge, unplug the charger from wall outlet, remove charger cord from product.
7. Replace silicone cover by pressing firmly back into place.
8. Replace Charging Cover by pressing back into place.
9. Charging Indicator Light flashes “Blue” color when charging. A solid “Blue” color indicates full charge.





IMPORTANT: Insert silicone cap securely and tightly into place after each charge. Never use with silicone cap not secured tightly into place.

Once charged, simply store the charging adaptor. Do not use the HairSonic while recharging batteries. DO NOT IMMERSE CHARGING ADAPTOR IN WATER. ADAPTOR CONNECTOR MUST REMAIN DRY AT ALL TIMES.

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT WASTE (E-WASTE)

Disposal information for E-waste depends on the city you are in, as all regulations are local. To learn about recycling or disposal programs in your area search “E-waste recycling or disposal” online. You can also contact your city directly or look into your local electronics store policy. For more information, please contact Pretika’s Customer Care.

HOW TO USE HAIRSONIC®

For Any Hair Type

No matter your age, over time the diameter of the hair naturally thins with increasing dryness and dullness. The sonic technology of the HairSonic helps address this natural thinning of the diameter by making hair strands look and feel fuller, helps soften wiry hair, improves the performance of shampoos and treatments for more conditioned hair, and leaves hair visibly more shiny. Sonic high-frequency technology penetrates the surface of each hair strand and individual fibers of the hair.

In just minutes, the HairSonic infuses the right amount of sonic technology to achieve a naturally-improved softness and shine and preparing the hair to better absorb treatments and colorings.

Plus, use separately or with other complementary products (sprays, gels, etc.) as part of your normal styling routine. HairSonic will not affect curls or style, so it can be used in combination with other styling and curling hair appliances.

Select Comb Combination

Ionic-Infused Comb Teeth separate and align hair strands while adding volume, taming frizz, and detangles.



Soft Tip Wide Tooth Comb

Use WET- detangles, cleanses, improves absorption of treatments



Wide Tooth Comb

Use DRY- detangles, cleanses and removes build-up

Attach and Remove Comb

Only remove and attach combs in OFF power mode - do not attach when product is operating. To attach Comb, simply align “grooved” channel at the top of the comb to the “slide” ridge on the extended handle of the HairSonic and glide slowly into place. To remove, slowly pull outward.

FUNCTIONAL MODES

For Dry Hair

Sonic high-frequency works to:

- Remove dry/flaking oils
- Remove build-up of hairsprays and residuals from shampoos, conditioners, and treatments
- Improves fullness
- Prepares hair to better absorb treatments
- Ionic-Infused comb heads increase shine of hair and eliminates static
- Use separately or with other complementary products (straighteners, curling irons) as part of your normal styling routine



For Wet Hair

The HairSonic is water-resistant.

- Use comb heads to detangle
- Prepares the hair to better absorb treatments and coloring
- Provides a more even distribution and improves coverage of treatments and coloring along the full length of the hair strand
- Provides an extra boost to loosen and remove set-in debris for cleaner more manageable hair



CARING FOR YOUR HAIRSONIC

Comb Attachments

- Remove Comb, rinse clean with warm water and mild soap to remove any build-up that may have accumulated, shake off excess water and towel dry - or gently rub the Comb attachment against a towel for 5-10 seconds while the HairSonic is on.
- Do not allow liquid cleansers or moisturizers to accumulate on Comb attachments.

HairSonic

- Do not use abrasive cleaners or chemicals to clean any part of the HairSonic.
- Clean handle with damp cloth - using mild detergent or warm water and towel dry immediately.

WARNINGS:

For external use only. Keep out of reach of children and please use as directed. Avoid contact with eyes. As with any product, discontinue use if rash, redness or itching occurs.

Consult physician if irritation persists. Anyone suffering from any skin disorder should consult physician before using this product.

Do not use on sore or injured areas.

1. Use this appliance only for its intended use as described in the Instructions For Use booklet.
2. Do not use attachments not recommended by manufacturer.
3. Do not leave unit on when not in use.
4. Do not apply extreme pressure when using unit or when replacing attachments. This could damage product. The attachments are delicate and must be attached and removed with care.
Not following operating instructions carefully may result in damage to the unit & attachments.
5. Basic safety precautions should always be followed when using any electrical product, especially when children are present.
6. Never charge if the Charger has a damaged cord or plug, if it is not working properly, or has been dropped into water.
7. Do not place or store the charging cord unit where it can fall or be pulled into tub, sink, water or other liquid.
8. Do not reach for charger cord unit that has fallen into water and unplug immediately.
9. Do not attach wet comb heads to handle while charging.
10. Keep the cord away from heated surfaces.
11. Do not attempt to open the Handle or any part of the unit to clean the interior.
12. Do not plug into an incorrect voltage source outlet. Use only with appropriate voltage.
13. Water-resistant for use in the shower or bathroom sink.
CAUTION: Do not use this unit under heavy running water in shower, bathtub or bathroom sink. Do not immerse this device into water.

Specifications

Input: 100-240V-50/60HZ Battery: Ni-Cd Battery

Output: 6.5VDC 600mA

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT

Complies with the limits for a Class B digital device, under Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

Relocate the receiving antenna

- Increase separation between equipment and receiver
- Connect the product into an outlet on a circuit different from the circuit the receiver is connected to.
- Consult the dealer or an experienced radio/television technician for help

This ISM device complies with Canadian ICES-001. Cet appareil ISM est conforme à la norme NMB-001 du Canada. This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Limited 90 Day Warranty

Your Pretika product is warranted to be free from defect in material and workmanship for a period of 90 days after its original purchase date under normal use. This warranty extends only to the original retailer purchaser with original proof of purchase and only when purchased from an authorized Pretika retailer or reseller. This warranty does not cover products determined by Pretika Corporation to be damaged by any of the following:

- Accident, misuse, abuse or alteration
- Servicing by unauthorized persons
- Use with unauthorized accessories or use other than instructed
- Use of incorrect charging adaptor types
- Any other conditions beyond our control

Some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary, from state to state. Pretika's entire liability for any defective product shall not exceed the purchase price for the defective product. Pretika disclaims any liability for general, consequential, incidental or special damages, even if aware of the likelihood of such damages.

During Warranty Period with Proof of Purchase (store receipt)

Should your product become defective during the warranty period, package the item securely and return it prepaid/insured - along with proof of purchase to:

Pretika Corporation
Warranty Repair Department
12215 Holly Street
Riverside, CA 92509 USA

To insure prompt repair or replacement, provide complete, legible name, street address, email and phone number information and a note indicating the nature of the product defect. We will Repair or Replace (at our sole discretion) product at no charge and return via ground shipment.

Outside Warranty Period

Should your product become defective outside the warranty period - or you do not have store receipt, package the item securely and return it prepaid/insured along with a check or money order payable to Pretika Corporation in the amount of \$30.00 to cover handling and postage charges. Be sure to include legible name, street address, email and phone number information.

Return to:
Pretika Corporation
Warranty Repair Department
12215 Holly Street
Riverside, CA 92509 USA

Customer Service

For questions or assistance relating to the use of this product - or for information on all of the innovative Beauty, Skin Care, Spa and Personal Care products manufactured by Pretika, contact our Customer Service Team by Phone at 949 481-8818, by fax at 949-481-8828, or by Email at customerservice@pretika.com.

Or visit us at www.pretika.com, www.facebook.com/pretikaskincare, and www.twitter.com/pretikaskincare.



HAIRSONIC®

REVITALIZE
FOR FULLER HAIR

Pretika Corporation

Riverside, CA 92509

p 949.481.8818 | **f** 949.481.8828

e customerservice@pretika.com

w www.pretika.com

 Facebook.com/pretikaskincare

 Twitter.com/pretikaskincare

 YouTube.com/pretikaskincare

 www.pinterest.com/pretikaskincare