Pretika Makeup Remover Power Cleanser

Cleanse Off- Even the Heaviest of Makeup

Model ST148

Instructions for Use & Warranty Information

Pretika®

Merging Science with Skin Care®

Pretika Makeup Remover Power Cleanser

Cleanse Off- Even the Heaviest of Makeup

Congratulations and thank you for being a customer of Pretika! Before you start, please take a moment to get to know your Facial Cleanser and how it works. For important information about safety and how to use the device, read the full "Instructions for Use" booklet.

Contact the experts at Pretika for any assistance in helping you get started:

Customer Service Contact:
1-949-481-8818
Email: customerservice@pretika.com
Or visit our website at www.pretika.com
Hours of Operation:
Monday – Friday
8:00 AM to 4:00 PM
Pacific Standard Time

Read and Save These Instructions

Makeup Remover Power Cleanser Features

Rotating cleansing technology works to deeply cleanse and remove makeup – yet gentle on the skin. Water-resistant for use in the shower or at the bathroom sink.

To Install or Replace Batteries

- 1. Make sure power is in the Off position.
- Remove Outer batterycompartment cover by holding the device and pulling outward the lift tab.
- Lift and pull open Inner battery-compartment cover.



- 4. Carefully pull out batteries (if replacing) and insert 2 new "AA" batteries. Use the markings in the battery compartment as a guide to position the (+) positive or (-) negative end of each battery.
- Replace back batter compartment cover by firmly pressing into place - keeping silicone seal in place, and then replace the outer battery cover by aligning the lower tab into slot and pressing firmly to close.

Do not mix old and new batteries. Do not mix alkaline, standard (carbonzinc) or rechargeable (nickel-cadmium) batteries. To dispose of alkaline batteries, place in the trash (normal municipal waste). Recycling of batteries at your local recycling center is good for the environment.

Important Information

It is our experience that if a product uses batteries, many of the problems thought to be product defects are simply caused by weak batteries. To save any unnecessary inconvenience and expense, we encourage you to always replace with new batteries.

Installing Cleansing Heads

To Attach Heads

Press the head (included) onto the connection hexagon shape pin until it locks into position with a click.

To Remove Heads

If replacing the brush head, gently pull brush head to remove. For best results, replace the brush head every three (3) months, or sooner if the bristles become depressed.



Pad Fastener Head

The Pad Fastener Head accepts any type of cotton or synthetic type of makeup remover pad. Simply attach pad to the textured fastener.

Daily Treatment

Step 1: Remove makeup

Step 2: Dampen face with warm water.

Step 3: Select Pad or Silicone Head options.

Step 4:

Using the Pad Fastener Head: Attach any brand of pads (soak with makeup remover cleanser), pre-soaked pads or towelettes.

Using Silicone Cleansing Head: Apply makeup remover to the skin. Press the Makeup Remover Power Cleanser to treated area and turn on. Press Power Button once for high power or press again for low power, speed is dependent on sensitivity of skin type. Press firmly to treated area and move the Makeup Remover Power Cleanser in an upward, circular motion.

Recommended time per treated area is 20 seconds for each area forehead, nose, chin and each cheek. Gently rinse skin thoroughly with warm water and pat dry.

Do not use directly onto the eye area – can be used in the Periorbital area (crows feet area). Use presoaked pads or wash cloth to remove makeup from upper and lower eye lid and eye lash areas.

This Makeup Remover Power Cleanser can be used daily, morning and night, but if you have especially sensitive skin or other skin concerns, talk to your doctor or dermatologist about frequency of use.

Caring For Your Makeup Remover Power Cleanser

Silicone Makeup Head

- Clean Head after every use. Remove Head, rinse clean with warm water and mild soap to remove any build-up that may have accumulated, shake off excess water and towel dry.
- 2. Do not allow liquid cleansers to accumulate on Head.

Makeup Remover Pads

1. Simply replace as needed.

Makeup Remover Device Handle

- 1. Do not use abrasive cleaners or chemicals to clean any part of the Makeup Remover.
- 2. Clean handle with damp cloth using mild detergent or warm water and towel dry immediately.

*DO NOT IMMERSE MAKEUP REMOVER IN WATER.

Replace Silicone or Pad Fastener Heads as needed- they can be purchased from your retailer or online at www.pretika.com.

Warning

For external use only. KEEP OUT OF REACH OF CHILDREN. Please be sure to use as directed. Avoid direct contact with eyes. Do not use Facial Brush without replaceable brush head attached. As with any product, discontinue use if rash, redness or itching occurs. Consult physician if irritation persists. Use this appliance only for its intended use as described in the Instructions For Use booklet. Do not apply extreme pressure when using unit or when replacing attachments. This could damage product. The attachments are delicate and must be attached and removed with care. Not following operating instructions carefully may result in damage to the Facial Brush unit and attachments. Basic safety precautions should always be followed when using any battery-operated product, especially when children are present.

IF SKIN IRRITATION OR REDNESS OCCURS, DISCONTINUE USE. As this product increases exfoliation effect of facial cleansers, it may also increase your skin's sensitivity to the sun. Save these instructions for future reference.

Limited 90 Day Warranty

Your Pretika product is warranted to be free from defect in material and workmanship for a period of 90 days after its original purchase date under normal use. This warranty extends only to the original retailer purchaser with original proof of purchase and only when purchased from an authorized Pretika retailer or reseller. This warranty does not cover products determined by Pretika Corporation to be damaged by any of the following:

- Accident, misuse, abuse or alteration
- Servicing by unauthorized persons
- Use with unauthorized accessories or use other than instructed
- Use of incorrect charging adaptor types
- Any other conditions beyond our control

Some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal its negligence. Pretika's entire liability for any defective product shall not exceed the purchase price for the defective product. Pretika disclaims any liability for general, consequential, incidental or special damages, even if aware of the likelihood of such damages.

During Warranty Period with Proof of Purchase (store receipt)

Should your product become defective during the warranty period, package the item securely and return it prepaid/insured – along with proof of purchase to the address shown below:

Outside Warranty Period

Should your product become defective outside the warranty period – or you do not have store receipt, package the item securely and return it prepaid/insured along with a check or money order payable to Pretika Corporation in the amount of \$20.00 to cover handling and postage charges. Be sure to include legible name, street address, email and phone number information and send to the address below:

Pretika Corporation Warranty Repair Department 12215 Holly Street Riverside, CA 92509 USA

To insure prompt repair or replacement, provide complete, legible name, street address, email and phone number information and a note indicating the nature of the product defect. We will Repair or Replace (at our sole discretion) product at no charge and return via ground shipment.



Pretika Corporation Riverside, CA 92509

- **p** 949.481.8818 | **f** 949.481.8828
- e customerservice@pretika.com
- w www.pretika.com

Facebook.com/pretikaskincare.com



Twitter.com/pretikaskincare