



Pretika
SonicDermabrasion®
PreShave Power Cleanser

Lift, Exfoliate and Cleanse

Instructions
for Use
& Warranty
Information
Model ST247

Pretika®

Merging Science
with Skin Care®

Limited 90 Day Warranty

Your Pretika product is warranted to be free from defect in material and workmanship for a period of 90 days after its original purchase date under normal use. This warranty extends only to the original retailer purchaser with original proof of purchase and only when purchased from an authorized Pretika retailer or reseller. This warranty does not cover products determined by Pretika Corporation to be damaged by any of the following:

- Accident, misuse, abuse or alteration
- Servicing by unauthorized persons
- Use with unauthorized accessories or use other than instructed
- Use of incorrect charging adaptor types
- Any other conditions beyond our control

Some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state. Pretika's entire liability for any defective product shall not exceed the purchase price for the defective product. Pretika disclaims any liability for general, consequential, incidental or special damages, even if aware of the likelihood of such damages.

During Warranty Period with Proof of Purchase (store receipt)

Should your product become defective during the warranty period, package the item securely and return it prepaid/insured.

Outside Warranty Period

Should your product become defective outside the warranty period – or you do not have store receipt, package the item securely and return it prepaid/insured along with a check or money order payable to Pretika Corporation in the amount of \$40.00 to cover handling and postage charges.

To insure prompt repair or replacement, provide complete, legible name, street address, email and phone number information and a note indicating the nature of the product defect. We will Repair or Replace (at our sole discretion) product at no charge and return via ground shipment.

Return to:

Pretika Corporation
Warranty Department
12215 Holly Street
Riverside, CA 92509 USA

Warning

1. For external use only. Keep out of reach of children and please use as directed. Avoid contact with eyes. As with any product, discontinue use if rash, redness or itching occurs. Consult physician if irritation persists. If anyone suffering from acne or any skin disorder should consult physician before using this product. Do not use on sore or injured areas.
2. Use this appliance only for its intended use as described in the Instructions For Use booklet.
3. Do not use attachments not recommended by manufacturer.
4. Do not leave unit on when not in use.
5. Do not apply extreme pressure when using unit or when replacing attachments. This could damage product. The attachments are delicate and must be attached and removed with care. Not following operating instructions carefully may result in damage to the SonicDermabrasion unit & attachments.
6. Basic safety precautions should always be followed when using any electrical product, especially when children are present.
7. Never operate the SonicDermabrasion Charger if it has a damaged cord or plug, if it is not working properly, or has been dropped into water.
8. Do not place or store the cradle and charging cord unit where it can fall or be pulled into tub, sink, water or other liquid.
9. Do not reach for cradle or charger cord unit that has fallen into water, unplug immediately.
10. Keep the cord away from heated surfaces
11. Do not attempt to open the Brush Handle to clean the interior.
12. Do not plug into an incorrect voltage source outlet, use only with appropriate voltage.
13. Water-resistant facial brush for use in the shower or bathroom sink – Caution: Do not use this device under heavy running water in shower or bathroom sink, do not immerse this device into water.

Specifications:

Input: 100-240V~50/60HZ

Output: 6.5VDC 500mA

Battery: Ni-Cd Battery, 600MA



Pretika
SonicDermabrasion®
PreShave Power Cleanser

Lift, Exfoliate and Cleanse

Pretika Corporation

Riverside, CA 92509

p 949.481.8818 | **f** 949.481.8828

e customerservice@pretika.com

w www.pretika.com

 [Facebook.com/pretikaskincare.com](https://www.facebook.com/pretikaskincare.com)

 [Twitter.com/pretikaskincare](https://twitter.com/pretikaskincare)



Pretika SonicDermabrasion® PreShave Power Cleanser

Congratulations and thank you for being a customer of Pretika! Before you start, please take a moment to get to know your PreShave Power Cleanser and how it works. For important information about safety and how to use the device, read the full Instructions for Use booklet. Contact the experts at Pretika for any assistance in helping you get started.

Customer Service Contact:

1-949-481-8818

Email: customerservice@pretika.com

Or visit our website at www.pretika.com

Hours of Operation:

Monday – Friday, 8:00 AM to 4:00 PM Pacific Standard Time

IMPORTANT INFORMATION

Your SonicDermabrasion may show a “red” light when charged for the 1st time (no “red” blinking light) – this is normal since each product is fully checked before shipment. If you’re charging for the 1st time and the green light is on – still charge the device to get a “full” charge before first use. Recommended 1st charge is 12 hours.

Features

- **Triple-flex Shaving Brush**
Lifts the beard up and away from the face for a closer cut – avoid razor burn, razor bumps and irritation
- **Sonic Cleansing Technology**
Removes the epidermal layer of dry/flaky skin cells – reducing the chance of blemishes and helps the skin look and feel smooth
- **Water-resistant (do not immerse device into water) Power Cleanser** for use in the shower or bathroom sink with cordless design for better control.

Charging

Make sure the product is power-off before the charge. The charge lasts about 5 hours.



It's better for the product not to be connected to the power supply for more than 24 hours. (Remark: The indicator light will not change or turn off when it is fully charged.)

1. Insert the product charger into the PreShave Power Cleanser.
2. Plug in the charger.
3. The charge indicator lights up (See diagram above).
4. After the full charge, unplug the charger and also pull off the product's plug from the Power Cleanser.

Specifications

Input: 100-240V~50/60HZ Battery: Ni-Cd Battery
Output: 6.5VDC 600mA

Disposal of Electrical and Electronic Equipment Waste (E-waste)

Disposal information for E-waste depends on the city you are in, as all regulations are local. To learn about recycling or disposal programs in your area search "E-waste recycling or disposal" online. You can also contact your city directly or look into your local electronics store policy.

For more information, please contact Pretika's Customer Care.



Using SonicDermabrasion® Daily Treatment

Preshave

Dampen face with warm water, or apply shaving cream or preshave conditioner. Use the PreShave Power Cleanser in a circular motion ending in an upward stroke to help lift the beard up and away from the face. Press Power Button once for low-speed or press again for high-speed. Speed setting is dependent on sensitivity of skin type, beard length and hair type. Gently rinse skin thoroughly after each use with warm water and pat dry. Apply shaving cream and shave. Finishing touch - a good, close-shave followed by the right facial wash and aftershave moisturizer to help achieve optimum skin health.

Exfoliation

Dampen face with warm water, or with cleansers, scrubs and microdermabrasion crèmes - dot face in five (5) areas: forehead, each cheek, chin and nose lightly, spread evenly over face with fingertips. Press firmly to treated area and move PreShave Power Cleanser in an upward, circular motion. Recommended time per treated area is 20 seconds for each area. Gently rinse skin thoroughly after each use with warm water and pat dry.

Micro-Fiber Bristle Triple Brush Heads– Attach and Remove

To attach Brush Head, align inner pin at center of brush head housing to the center opening on the head of the device. Holding the device handle, press from the center of the brush head and push down until it snaps into place.

Align Brush Head onto Device as shown. ▶

To remove the Brush Head, simply grip the outer plastic base of the Brush Head firmly in one hand and the device handle in the other hand – then pull up evenly.



This ISM device complies with Canadian ICES-001. Cet appareil ISM est conforme à la norme NMB-001 du Canada. This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Caring For Your SonicDermabrasion® PreShave Power Cleanser

Micro-Fiber Bristle Brush Heads

1. Clean Brush Heads after every use. Remove Brush Heads, rinse clean with warm water and mild soap to remove any build-up that may have accumulated, shake off excess water and towel dry – or gently rub the Brush Head against a towel for 5-10 seconds while the SonicDermabrasion is on. Do not attach wet brush heads to handle while charging.
2. Do not allow liquid cleansers or moisturizers to accumulate on Brush Heads.
3. To clean, place a small amount of shampoo onto fingertips, then work into bristles, rinse clean and air or towel dry.

Replace Brush Heads as needed – depending on use, a brush head should last between 3-4 months, they can be purchased from your retailer or online at www.pretika.com.

Facial Brush Handle

1. Do not use abrasive cleaners or chemicals to clean any part of the Sonic Dermabrasion.
2. Clean handle with damp cloth – using mild detergent or warm water and towel dry immediately.

*DO NOT IMMERSER CHARGING ADAPTOR IN WATER. ADAPTOR CONNECTOR MUST REMAIN DRY AT ALL TIMES.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.